

Resetable Switch Call Point Installation Manual SCP-113D

Features

1. Case has a variety of colors to select.
2. Resetable design, obvious indicators around the edges of the unit.
3. Press the pressing plate to enable the output function.
4. Pressing plate with status shown.
5. Reversionary key with non-slip design.
6. Built-in buzzer status to set as silent, interval wailing or continuous wailing. Volume is adjustable.
7. Input power range from DC12-24V (depending on the Model) to connect with all types of fire alarm system.
8. Easy to assemble, outer case without screws, 3 set of output points to connect other equipment, embedded or surface installations to select.
9. The case with panel detection, the buzzer will buzz immediately when the transparent panel were opened.

Accessories



Emergency switch x 1



Key x 1



M3x16 Screws x 2

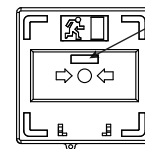
Model

Color			
G : Green	O : Orange	Y : Yellow	BU : Blue
R : Red	W : White	B : Black	


Specifications

Item	Model	SCP-113D	NOTE
Power supply		DC 12V~DC 24V	+/- 10%
Operation current		DC 12V/10mA(Standby)/50mA(Operation) DC 24V/11mA(Standby)/64mA(Operation)	+/- 10%
Buzzer		Set as silent, interval wailing or continuous wailing	
Indicator		Dual-color (red and green) Red indicator to set blinking, off or on.	
Output		N.O., N.C. & COM. Output (Maximum load of 250V/5A)	
Panel Detection		Yes	
Weight		SCP-113D : 210g	
Dimensions		90mm(L)x93mm(W)x45mm(H)	
Material		ABS, PC(transparent part)	


(Standby)



Status display : Green




(Operation)

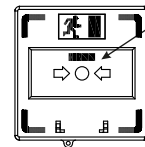

Status display : Red



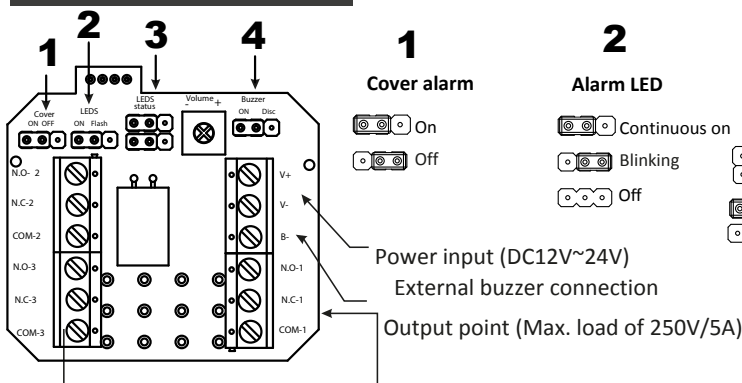Connections SCP-113D






ATTENTION BEFORE INSTALLATION

* Please press the pressing plate to make sure the states turns red before opening the front and middle covers in order to prevent the spring being popped out.







* Fixed holes embedded box as 60mm.

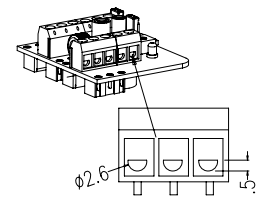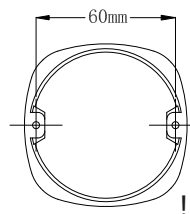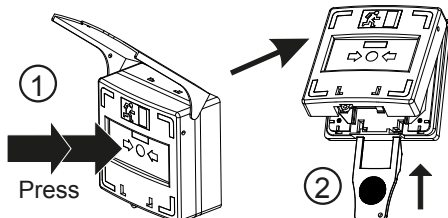* Restricted terminal's aperture shown below.










Installation

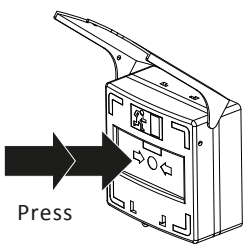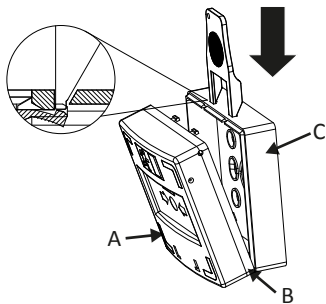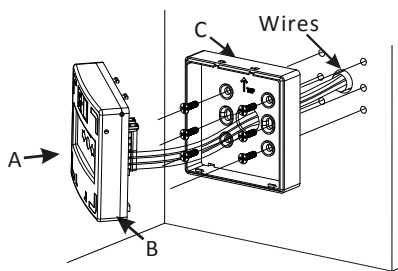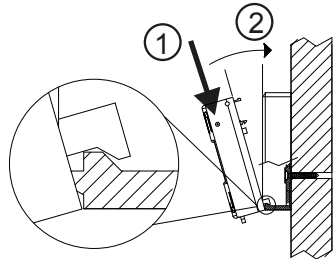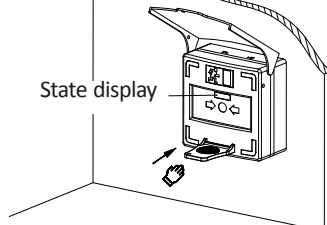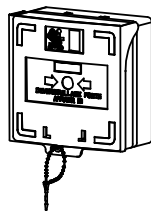Surface Installation

<p>1.</p>  <p>Press</p>	<p>2. Use key to disassemble B and C fastenings.</p> 	<p>3. Fix bottom cover C and connect the Wires.</p> 
<p>4. Fastening the unit as the diagram shown above.</p> 	<p>5. Insert the key into the key hole. Pull the key out when the states turns Green to complete the setting.</p>  <p>State display</p>	<p>6. Cover the case and tie with a cable tie to prevent it from opening.</p> 

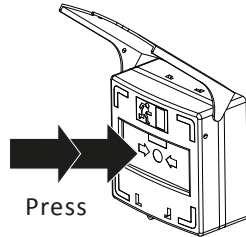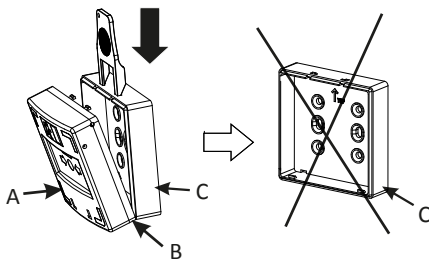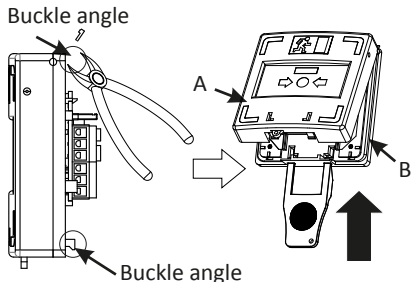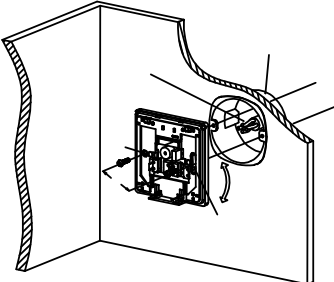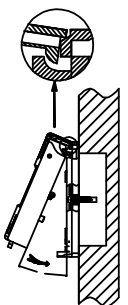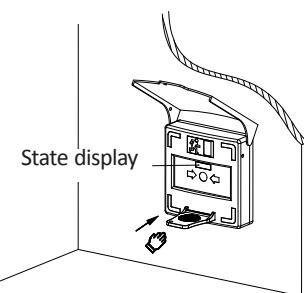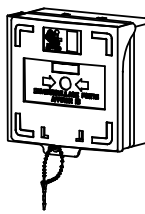Embedded Installation

<p>1.</p>  <p>Press</p>	<p>2. Use key to disassemble B and C fastenings. No bottom cover C needed for embedded installation.</p> 	<p>3. Use key to disassemble A and B fastenings. Clip the unnecessary buckle angles.</p>  <p>Buckle angle</p>	
<p>4. Fix middle cover B and connect The wires.</p> 	<p>5. Fastening the unit as the diagram shown above.</p> 	<p>6. Insert the key into the key hole. Pull the key out when the states turns green to complete The setting.</p>  <p>State display</p>	<p>7. Tie it with a cable tie to prevent from pressing th button. It is suggested to remove the transparent panel if it is not tied with a cable tie.</p> 

EMBEDDED INSTALLATION NOTICE : To avoid influencing the function output when using with other company metal box, Please do not screw the middle cover too tight.

ATTENTION !!!

